



Hands-Free Liftgate Actuation Lower Sensor

Removal


1. Remove the center section of the rear bumper cover.
 1. Remove the retainers.
 2. Release the tabs and remove the center section of the rear bumper cover.

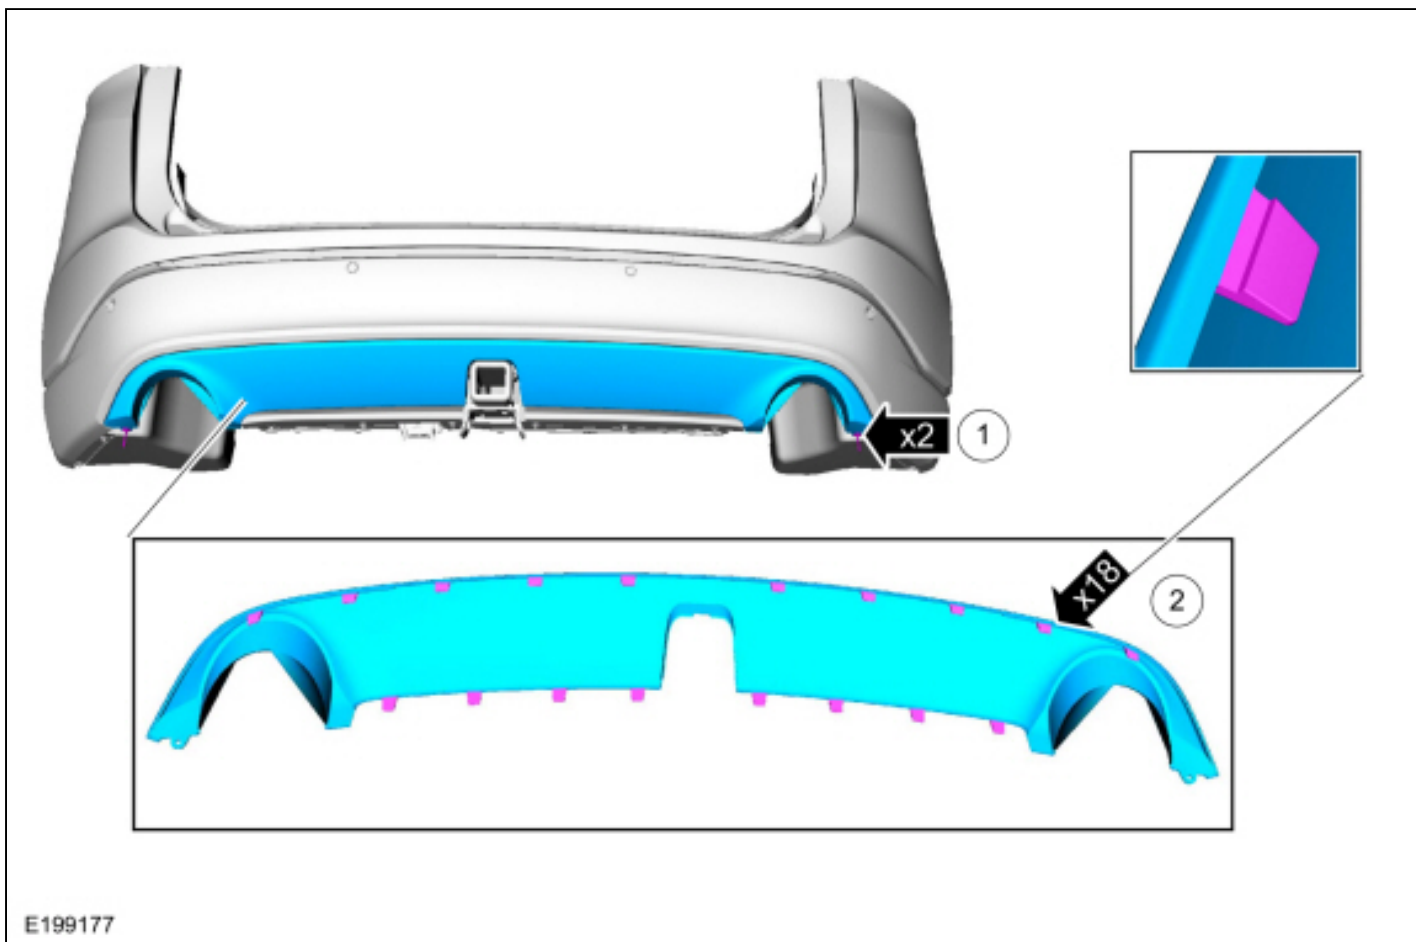

2. Disconnect the hands-free liftgate actuation lower sensor electrical connector.

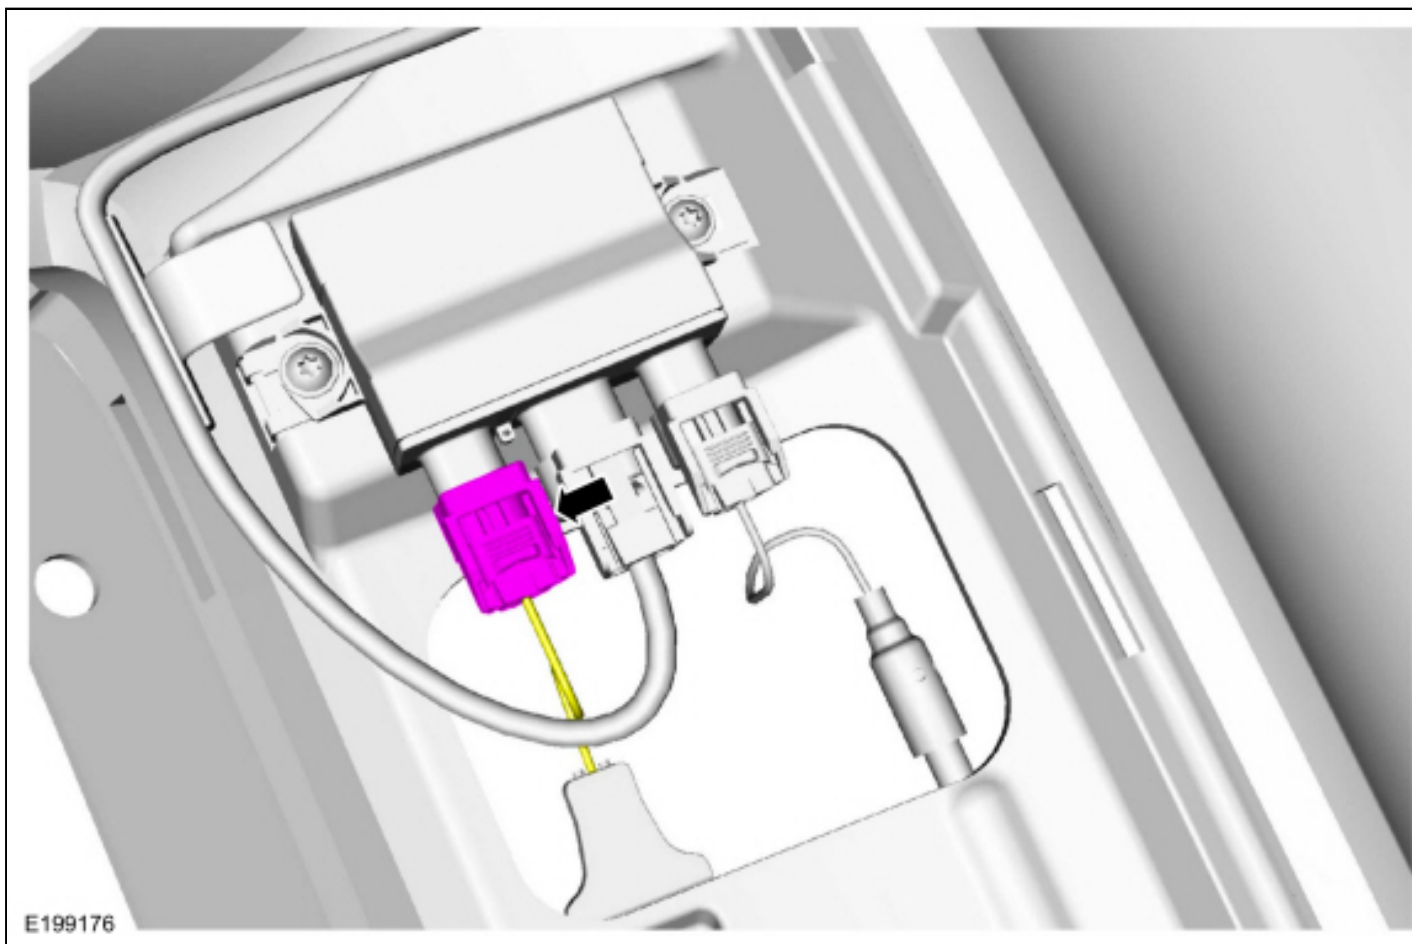

3. Remove the retainers and the hands-free liftgate actuation lower sensor.

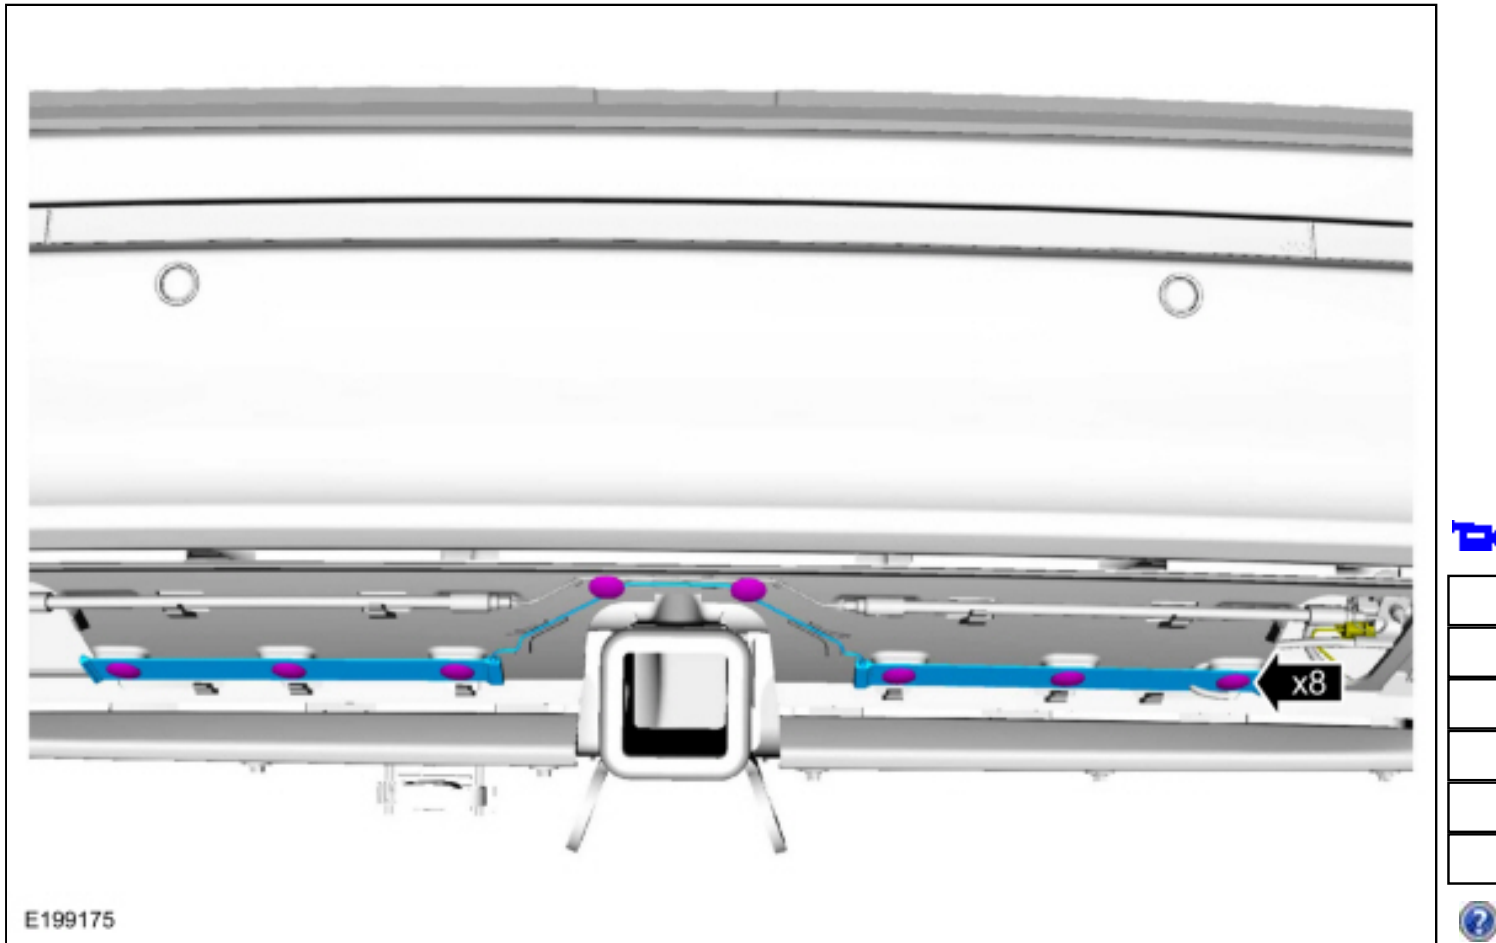

Installation

1. To install, reverse the removal procedure.