



Hands-Free Liftgate Actuation Upper Sensor

Removal


1. Remove the center section of the rear bumper cover.
 1. Remove the retainers.
 2. Release the tabs and remove the center section of the rear bumper cover.

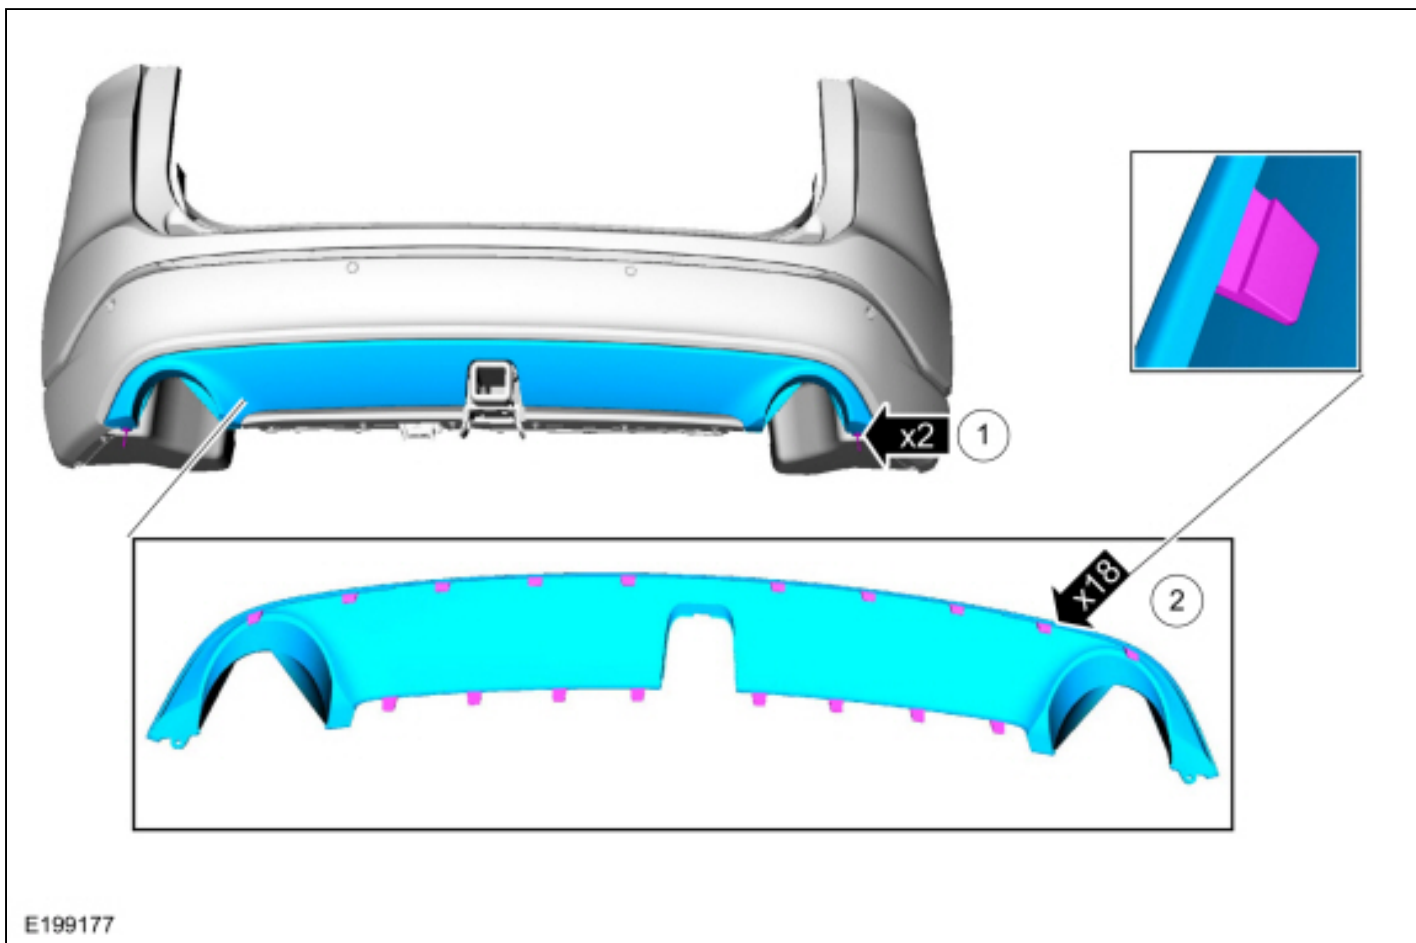

2. Disconnect the hands-free liftgate actuation upper sensor electrical connector.

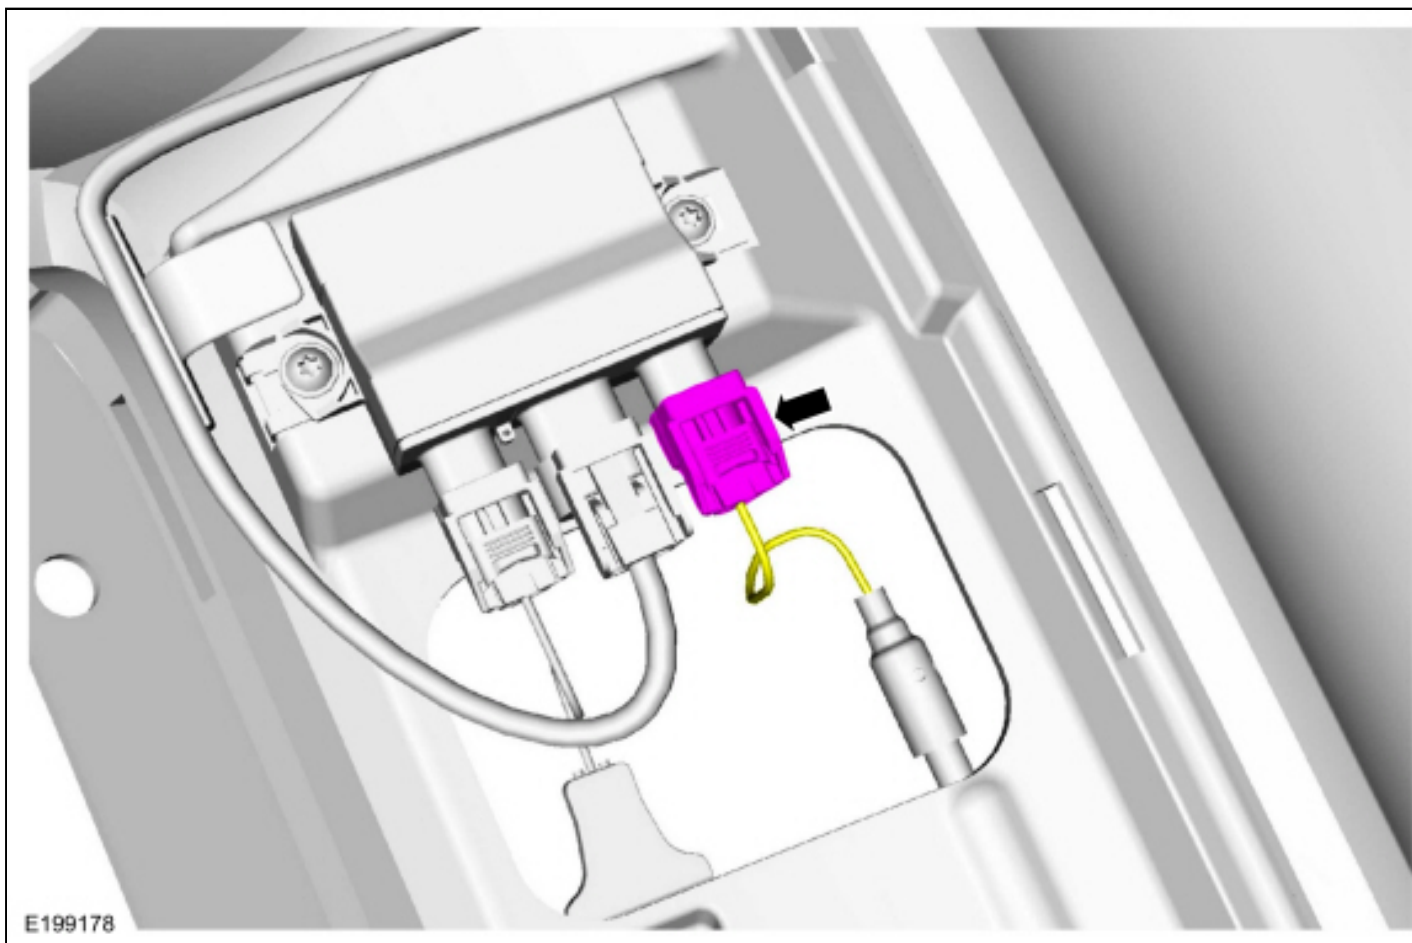

3. Remove the hands-free liftgate actuation upper sensor.
1. Remove the retainers.
 2. Release the tabs and remove the hands-free liftgate actuation upper sensor.

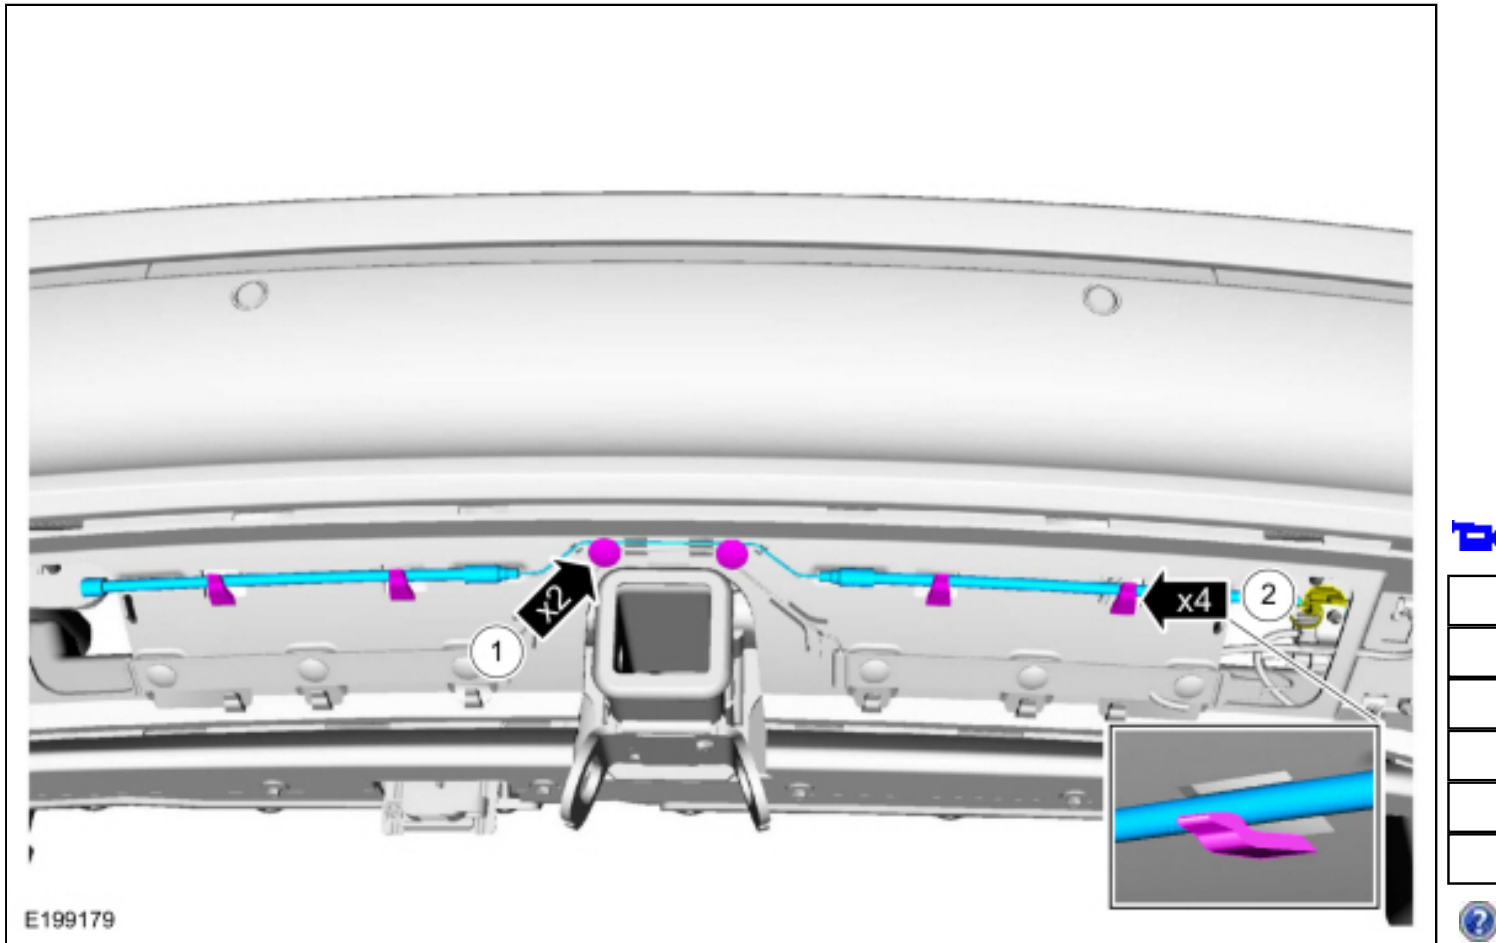

Installation

1. To install, reverse the removal procedure.